
Modify Default Equipment (EQ) Number

10/01/2025 11:14 am MDT

The default equipment (EQ) number is the value that is set to display whenever equipment units are generated on a template (for example, on cover sheets using the <Units_EqNumbField_List> variable).

To change the default EQ number, navigate to the project configuration page (**Project Menu > Set Up > Project Configuration**). Under the "Advanced" tab, expand the "Defaults" section and update the "EQ number" value to the desired output.

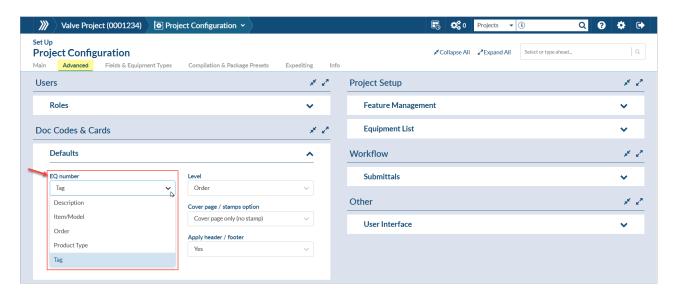



Note: The value that it initially selected comes from the project template settings (see article: Project Templates)

If a specific code requires a different EQ value to be generated, the value can be modified for the individual doc code. To make the adjustment, navigate to **Project Menu > Cards > Code List** and from the "Eq#" column, select a different value directly in the grid for the appropriate doc code.

